

OPERATING THE THERMOSTAT

Using Touch ‘N’ Go buttons

Once you have set the temperatures and time periods that correspond with your three Touch ‘N’ Go comfort buttons (see **Programming the Touch ‘N’ Go feature**, page 13, and **Assigning time periods to temperatures**, page 26), you won’t need to use your Touch ‘N’ Go buttons unless you want to make a temporary change. For example, if you go to bed earlier than usual, pressing the **sleep** button will lower the temperature sooner than scheduled. If you go to bed later than usual, pressing the **home** button will keep the home warmer past your usual bedtime but you’ll need to press **sleep** before you go to bed.

To make a temporary change

1. Open the door.
2. Press the **home**, **away** or **sleep** button that you want. You will see the words *temporary hold* on the display and the triangle icon (▼) over the button you’ve selected. The system will change to the temperature setting programmed for that lifestyle period. It will maintain that temperature setting until the start of the next programmed cycle.

